

CODE REF : **153-USP-A4**

 GUIDE COLOUR
DO NOT PRINT

MASTER FILE: FOLD TO 105 X 99MM

14.08.19 : SIGN OFF SHAUNA
9.9.19 : FILE CREATED
26.9.19 ; ADDED DECLARATION
16.04.21: 4726 ADD 2 NEW STYLES. APPROVED EMAIL 20.04.21
0722 REBRAND - 4614
25.04.24 7154


PANTONE REFERENCE



GRAPHICS - Location: CURRENT:Product Range:USER SHEETS:2016-EXCEL MASTER FILES:153USP-HEATED JACKET-USP:S153-A4-0424

HU FÚTHETŐ DZSEKI

AKKUMULÁTOR SPECifikáció

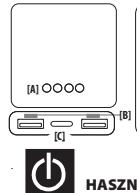

10.000 mAh AKKUMULÁTOR - Tölts fel 3-4 órára kerezzet, hogy a kabát maximális eljárását elérje.

[A] KÍMÉTŐ TÖLTÖTSÉGI SZINT GOMB

A kámkák az ízelítők, hogy mennyi energia maradt.

[B] 2 X USB PORT, 1 X USB-C PORT

Az akkumulátor USB-port lehetséges teszi a fűtés rendszerehez való csatlakozást a kabát belséjében.

A második USB port lehetséges teszi a mobil eszközök töltését.

[C] KIMÉTŐ CSATLAKOZÓ TÖLTÉSI ZSIBB

A kabátban két szint megtalálható a gombnak megfelelően.

[D] AKKUMULÁTOR TÖLTÖTSÉGI SZINT GOMB

A kabátban két szint megtalálható a gombnak megfelelően.

HASZNÁLATI UTASÍTÁS

KÜLÖZŐ - SZINT
Magas hőmérséklet: Piros fénny - FŰTÉSI IDŐ 3 óra - Hőmérséklet 45°C
Középső hőmérséklet: FEHÉR fénny - FŰTÉSI IDŐ 6 óra - Hőmérséklet 35°C
Alacsony hőmérséklet: Kék fénny - FŰTÉSI IDŐ 10 óra - Hőmérséklet 25°C

HASZNÁLATI ÚTMUTATÓ

- Csatlakoztatás az akkumulátorról az USB-kábelhez a belső zsebbel.
- Az akkumulátor sikeres csatlakoztatásakor a bekapcsoló gomb világít.
- A bekapcsolásra tartozó lenyomva a gombot (kb. 3 másodperc)
- A kabát így már a panelének körülöttől nyílik ki.
- A kabátba beépített csak száraz helyen tárulók. Az akkumulátoroknak mindenkor száraznak kell lenniük.
- A többi akkumulátorról semmilyen fém rész nem kerülhet. Ennek célja a rövidzárlat kockázatának elkerülése.
- A kabát le kel vezetni vagy ki kell kapcsolni magasabb hőmérsékleteken. Ennek elmulasztása tölthetőleges vagy hosszúkörű.
- Néha az akkumulátor fémterületei, hogyan van a kabát van-e kapcsolva, a kabát van-e húzza, és a rövidzárlat.
- Néha gyűrű a hálózatban, hogy a szegénységben a gombot meg nem hagyja a gombot.
- Tartsa a gombot a kabát és lánivalya között kiválasztva.
- Magas hőmérséklet: Piros fénny, Középső hőmérséklet: FEHÉR fénny, Alacsony hőmérséklet: Kék fénny.
- A káplásokhoz nyomja meg a tartó lenyomva a gombot (kb. 3 másodperc)
- Ha a kabát várhatóan káplásol, ellenőrizze a kabát csatlakozását és az akkumulátor töltését.
- A panel körülbelül 10 percig használható.
- A panel körülbelül 10 percig használható a készülékek a másodlagos USB portoz.
- Felhívjuk a figyelmet, hogy a mobil eszköz töltéséhez a használt használattal hosszú.
- Mosás előtt ellenőrizze, hogy az akkumulátor le van-e húzza és távolítsa el a kabátból.
- Mossa a kabátot 30°C-en egyre programmal.
- Használjon mindenkor vagy érhe mosásért.
- Néha gyűrűt. Ne használjon fehér vagy vegyszertelen folyadékot. Az oldószerek károsítják a kabátot.
- Néha bőrrel.
- DIZOMZÁSI UTASÍTÁSOK
- Ez a termék nem szabad csempézni vagy gyemekken alkalmazni.
- Nem alkalmazható rössz várkéréséssel vagy hőszekrényéssel rendelkező személyek számára.
- Ne használja, ha a bőr belső nedvessége vagy párlás. A fűtés funkcióinak biztonságos használatahoz a termékkel teljes színben kell lenni.
- Ne erítse meg a fűtőelemet. A nem megfelelő használat egészségi sérelmeket okozhat.
- Ne használja, ha a bőr belső szervet vagy szakadt.
- Ha bármilyen kellemetlen érzés jelentkezik, azonnal kapcsolja ki



BELSŐ ZSEB AZ AKKUMULÁTOR TÁROLÁSÁRA AZ AKKUMULÁTOR REJTEGET KÁBELLE A ZSEB MÓGOTT

A PANEL ELHÉLYEZÉSE

HASZNÁLATI UTASÍTÁS


- Néha gyűrűt vagy fém részt tűzzen a ruhanemű. A külön behatások mint például a gombost vagy tű, károthatják az elektronikus vezetéket
- Tárolás előtt tartsa a kabát van-e kapcsolva, a kabát van-e húzza, és a rövidzárlat.
- Néha gyűrű a hálózatban, hogy a szegénységben a gombot meg nem hagyja a gombot.
- Tartsa a gombot a kabát és lánivalya között kiválasztva.
- Magas hőmérséklet: Piros fénny, Középső hőmérséklet: Kék fénny - FŰTÉSI IDŐ 3 óra - Hőmérséklet 45°C
- Középső hőmérséklet: FEHÉR fénny - FŰTÉSI IDŐ 6 óra - Hőmérséklet 35°C
- Alacsony hőmérséklet: Kék fénny - FŰTÉSI IDŐ 10 óra - Hőmérséklet 25°C

HASZNÁLATI ÚTMUTATÓ

- Csatlakoztatás az akkumulátorról az USB-kábelhez a belső zsebbel.
- Az akkumulátor sikeres csatlakoztatásakor a bekapcsoló gomb világít
- A bekapcsolásra tartozó lenyomva a gombot (kb. 3 másodperc)
- A kabát így már a panelének körülöttől nyílik ki.
- A kabátba beépített csak száraz helyen tárulók. Az akkumulátoroknak mindenkor száraznak kell lenniük.
- A többi akkumulátorról semmilyen fém rész nem kerülhet. Ennek célja a rövidzárlat kockázatának elkerülése.
- A kabát le kel vezetni vagy ki kell kapcsolni magasabb hőmérsékleteken. Ennek elmulasztása tölthetőleges vagy hosszúkörű.
- Néha gyűrű a hálózatban, hogy a szegénységben a gombot meg nem hagyja a gombot.
- Tartsa a gombot a kabát és lánivalya között kiválasztva.
- Magas hőmérséklet: Piros fénny, Középső hőmérséklet: Kék fénny - FŰTÉSI IDŐ 3 óra - Hőmérséklet 45°C
- Középső hőmérséklet: FEHÉR fénny - FŰTÉSI IDŐ 6 óra - Hőmérséklet 35°C
- Alacsony hőmérséklet: Kék fénny - FŰTÉSI IDŐ 10 óra - Hőmérséklet 25°C

PT CASACO AQUECIDO

ESPECIFICAÇÃO DA BATERIA

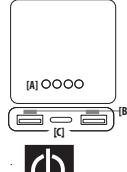

10.000 MAH BATERIA - Carregue de 3 a 4 horas para o máximo de benefícios da jaqueta.

[A] BOTÃO NÍVEL DE BATERIA

PIL SEVİYESİ DÜĞMESİ

Luz VERMELHA - TEMPO DE AQUECIMENTO 3 HORAS - Temperatura 45°C

Temperatura média: Luz BRANCA - TEMPO DE AQUECIMENTO 6 HORAS - Temperatura 35°C

Baixa temperatura: Luz AZUL - TEMPO DE AQUECIMENTO 10 Horas - Temperatura 25°C

ESPECIFICAÇÃO DE VESTUÁRIO - 5547, 5548, 5549



BOLSO INTERNO PARA ARMAZENAMENTO DE BATERIA, CABO DE ALIMENTAÇÃO DA BATERIA OCULTO SÓBRE ESTE BOLSO

COLOCAÇÃO DO PAINEL

INSTRUÇÕES DE UTILIZAÇÃO

- Se encontrar algum desconforto, desligue imediatamente
- Não use pano seco para secar de vestuário. Os pinos podem causar danos à fiação elétrica
- Antes de guardar, verifique se o casaco está desligado, o cabo está desconectado e a roupa está totalmente resfriada
- Não amasse ou enrijache a peça colocando itens sobre ela enquanto a armazena. Isto evitará danos aos componentes eletrônicos internos.
- O casaco deve ser desconectado do ambiente em temperaturas mais altas. Não fique isso muito tempo em superaquecimento ou insolação.
- Não use o casaco com o metal de metal. Tal evitaria riscos de curto-circuito
- Não quebre a bateria aéreas
- Guarde a bateria apenas em ambientes secos. As baterias devem permanecer sempre secas
- Nunhuma peça de metal deve entrar na seção da bateria do carregador. Tal evitaria riscos de curto-circuito
- Os contatos dos carregadores e baterias devem ser limpos sempre
- Para obter a maior duração possível da bateria, remova a bateria do carregador quando estiver pronto para usá-la.
- Amanhã fornece pressão de ar seca e fria de momento (cerca de 3 segundos)
- Para ligar, pressione e segure o botão de energia (cerca de 3 segundos)
- O casaco agora começará a aquecer pelos painéis
- Para alterar o nível de temperatura, pressione o botão de energia de novo
- Continue pressionando o botão para selecionar o nível de temperatura necessário
- Alta temperatura: luz vermelha, Temperatura média: luz BRANCA, Baixa temperatura: luz AZUL
- Para ligar, pressione e segure o botão de energia (cerca de 3 segundos)
- Se o casaco não aquecer imediatamente, verifique as conexões dos cabos e a carga restante na bateria.
- Para carregar um dispositivo móvel, basta conectar-se através da segunda porta USB
- Observe que o carregamento de um dispositivo móvel afetará o tempo de uso

INSTRUÇÕES DE LAVAGEM

- Antes de lavar, verifique se a bateria está desconectada e removida do casaco
- Lavar a casaco a 30°C com uma lavagem suave
- Use detergente neutro
- Não lava a seco. Não use avelantes ou líquidos de limpeza a seco. Solventes de limpeza podem causar danos ao revestimento
- Não engomar

INSTRUÇÕES DE SEGURANÇA

- Este produto não deve ser usado com bebês ou crianças
- Não deve ser usado em pessoas com má circulação sanguínea ou sensibilidade ao calor
- Não use se o fôrma interior estiver molhado ou úmido. O produto deve estar totalmente seco para uso
- Não toque nos elementos de equipamento com a pele nua. Queimaduras podem resultar de uso inadequado
- Não use se o fôrma interior estiver danificado ou rasgado

INSTRUÇÕES DE LAVAGEM


- Antes de lavar, verifique se a bateria está desconectada e removida do casaco
- Lavar a casaco a 30°C com uma lavagem suave
- Use detergente neutro
- Não lava a seco. Não use avelantes ou líquidos de limpeza a seco. Solventes de limpeza podem causar danos ao revestimento
- Não engomar

INSTRUÇÕES DE SEGURANÇA

- Este produto não deve ser usado com bebês ou crianças
- Não deve ser usado em pessoas com má circulação sanguínea ou sensibilidade ao calor
- Não use se o fôrma interior estiver molhado ou úmido. O produto deve estar totalmente seco para uso
- Não toque nos elementos de equipamento com a pele nua. Queimaduras podem resultar de uso inadequado
- Não use se o fôrma interior estiver danificado ou rasgado

RU КУРТКА С ПОДОГРЕВОМ

ТЕХНИЧЕСКИЕ ХАРАКТЕРИСТИКИ АККУМУЛЯТОРА

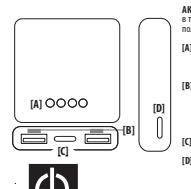

АККУМУЛЯТОР ЕМКОСТЬЮ 10 000 мАч - Заряжайте в течение 3-4 часов, чтобы получить максимальную пользу от куртки.

[A] КНОПКА ИНДИКАЦИИ УРОВНЯ ЗАРЯДА АККУМУЛЯТОРА

Сигнальные индикаторы показывают, сколько заряд осталось.

[B] 2 X USB PORT, 1 X USB-C PORT

Одно из USB-портов подключается к системе подогрева внутри куртки.

Второй USB-порт позволяет зарядить Ваш мобильный телефон.

[C] ПОРТ ВЫБОРА: Зарядка блок

[D] ВНУТРЕННЯЯ КНОПКА ИНДИКАЦИИ УРОВНЯ ЗАРЯДА АККУМУЛЯТОРА - Используйте эту кнопку, чтобы увидеть, сколько осталось заряда аккумулятора.

ИНФОРМАЦИЯ ПОЛЬЗОВАТЕЛЮ

КУРТКА ИНДИКАЦИИ - УРОВЕНЬ ЗАРЯДА
Высокая температура: КРАСНЫЙ индикатор - время подогрева 3 часа - Температура 45°C
Средняя температура: БЕЛЫЙ индикатор - время подогрева 4 час - Температура 35°C
Низкая температура: СИНИЙ индикатор - время подогрева 10 часов - Температура 25°C

ИНСТРУКЦИЯ ПО ПРИМЕНЕНИЮ

Подключение к аккумулятору с помощью USB-кабеля, расположенного во внутреннем кармане на куртке.

Если кнопка подключена правильно, загорится кнопка питания

• Для включения нажмите и держите кнопку питания (приблизительно 3 секунды).

• Термо кулер начнет нагреваться через панель

• Для выключения нажмите и держите кнопку питания (приблизительно 3 секунды).

• Если термо кулер не загорелся, проверьте соединение кабеля и оставшиеся заряды в баках аккумуляторов.

• Если термо кулер загорелся, но не загорелся кабель аккумулятора, отключите кабель аккумулятора от зарядки.


• Перед каждым использованием проверьте кабель аккумулятора.

INNER

297mm

EN HEATED JACKET

BATTERY SPECIFICATION

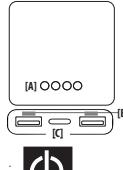

10,000 MA BATTERY - Charge for 3-4 hours to get the maximum benefits from the jacket.

[A] BATTERY LEVEL INDICATOR

Lights indicate how much power is left.
[B] 2 X USB PORT, 1 X USB-C PORT
 Primary USB port allows connection to the heating system inside the jacket. Second USB port allows you to charge your mobile devices.

[C] USB-C OUTPUT PORT

Charge your battery pack
[D] BATTERY LEVEL BUTTON
 Use this button to show how much battery life is left.

USER INFORMATION

BUTTON DISPLAY - LEVEL

High temperature: RED light - HEAT TIME 3 HOURS-Temperature 45°C
 Medium temperature: WHITE light - HEAT TIME 6 HOURS-Temperature 35°C
 Low temperature: BLUE light - HEAT TIME 10 Hours-Temperature 25°C

INSTRUCTIONS FOR USE

- Connect your battery pack with the USB cable located at the inner pocket.
- When the jacket is connected successfully, the power button will light up.
- To turn on press and hold the power button for around 3 seconds.
- The jacket will now begin to heat through the panels.
- To change temperature level, press the power button again.
- Keep pressing the button to set the temperature level required.
- High temperature: RED light, Medium temperature: WHITE light, Low temperature: BLUE light.
- To turn off, press and hold the power button again (around 3 seconds).
- If the jacket turns off unexpectedly, ensure to check cable connections and the remaining charge in the battery pack.
- To charge a mobile device, simply connect through the second USB port.
- Please note that charging a mobile device will affect the length of usage.


WASHING INSTRUCTIONS

- Before washing, ensure the battery pack is disconnected and removed from the jacket.
- Wash jacket at 30 °C on a mild wash.
- Use neutral or mild detergent.
- Do not dry clean. DO NOT use bleach or dry cleaning liquids. Cleaning solvents may cause damage to the jacket.
- Do not iron.

SAFETY INSTRUCTIONS


- This product should not be used on infants or children.
- Not for use on a person with poor blood circulation or sensitivity to heat.
- Do not use if the inner lining is wet or damp. Product must be fully dry for safe use of the heating functions.
- Do not touch heating elements with bare skin. Burns can result from improper use.
- Do not use if inner lining becomes damaged or torn.

GARMENT SPECIFICATION- SS47, SS48, SS49

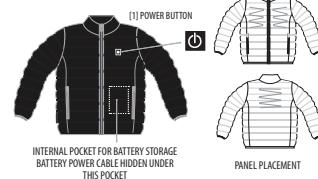

DE HEIZBARE JACKE

BATTERIESPEZIFIKATION

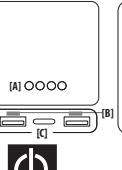

10000 MA BATTERIE - Laden Sie das Gerät 3-4 Stunden lang auf, um den maximalen Nutzen aus der Jacke zu ziehen.

[A] KNOPF FÜR AKKUHALTESTAND

Leuchten zeigen den Ladestand an.
[B] 2 X USB PORT, 1 X USB-C PORT
 Haupt USB-Anschluss ermöglicht den Anschluss an das Heizsystem in der Jacke. Zweit USB-Anschluss ermöglicht das Aufladen von mobilen Geräten.

[C] AUSGANGSPORT Laden Sie die Akkus

[D] KNOPF FÜR AKKUHALTESTAND Nutzen Sie diesen Knopf zur Anzeige der Restenergie

BENUTZERINFORMATION

TASTENANZEIGE - LEVEL

Höchsttemperatur: ROTES Licht - HEIZZEIT 3 STUNDEN-Temperatur 45°C
 Mittlere Temperatur: WEISSES Licht - HEIZZEIT 6 STUNDEN-Temperatur 35°C
 Geringe Temperatur: BLAUES Licht - HEIZZEIT 10 Stunden-Temperatur 25°C

GERECHTSAMKEITSWEISUNG

- Verbinden Sie das Akkupack mit dem USB Kabel in der Innentasche.
- Wenn das Akkupack korrekt angeschlossen ist leuchtet der Netzschalter auf.
- Zum Einschalten den Netzschalter gedrückt halten (ca. 3 Sekunden)
- Die Jacke wird sich aufheizen.
- Um die Temperatur zu ändern den Einschaltknopf drücken.
- Drücken Sie den Einschaltknopf bis das gewünschte Level erreicht ist.
- Höchsttemperatur: ROTES Licht, Mittlere Temperatur: WEISSES Licht, Geringe Temperatur: BLAUES Licht
- Zum Ausschalten des Einschaltknopf gedrückt halten (ca. 3 Sekunden)
- #Falls sich die Jacke unerwartet abschaltet überprüfen Sie die Kabelverbindung und die verbleibende Akkuleistung.
- Um ein Mobilgerät aufladen einfach mit dem zweiten USB-Port verbinden.
- Das Aufladen eines mobilen Gerätes hat Einfluss auf die Laufzeit des Akkupacks

WASCHANLEITUNG

- Stellen Sie sicher dass das Akkupack vor der Wäsche entfernt wurde
- 30 °C Schwachwaschen
- Neutrale und milde Waschmittel verwenden
- Nicht reinigen. Keine Bleichmittel verwenden. Reinigungsmittel können die Jacke beschädigen
- Nicht bügeln

SICHERHEITSANLEITUNG

- Nicht für Kinder und Kleinkinder geeignet!
- Nicht für Personen mit Kreislaufproblemen oder Hitzeempfindlichkeit geeignet!
- Nicht benutzen wenn Innenohrfeuchtigkeit oder Nass. Produkt muss komplett trocken sein.
- Einsatz der Heizfunktion sicher!
- Heizelemente nicht ohne Hautschutz berühren. Verbrennungen bei unsachgemäßer Nutzung möglich!

SPECIFYING LITHIUM BATTERIES

- Lithium-Ionen-Batterien unterliegen den gesetzlichen Anforderungen für gefährliche Güter
- Transport von Batterien muss gemäß den örtlichen, nationalen und internationalen regulierungen
- Übersetzen kann Transport von Batterien durch Dritte
- Commercial transport of batteries by third parties is subject to Dangerous Goods Legislation
- During transport, ensure battery contact terminals are protected. Ensure battery is secure.
- Do not transport batteries that are cracked or leaking

TRANSPORTING LITHIUM BATTERIES

- Lithium-Ionen-Batterien unterliegen den gesetzlichen Anforderungen für gefährliche Güter
- Transport von Batterien muss gemäß den örtlichen, nationalen und internationalen regulierungen
- Übersetzen kann Transport von Batterien durch Dritte
- Commercial transport of batteries by third parties is subject to Dangerous Goods Legislation
- During transport, ensure battery contact terminals are protected. Ensure battery is secure.
- Do not transport batteries that are cracked or leaking

WASHING INSTRUCTIONS

- This product should not be used on infants or children.
- Not for use on a person with poor blood circulation or sensitivity to heat.
- Do not use if the inner lining is wet or damp. Product must be fully dry for safe use of the heating functions.
- Do not touch heating elements with bare skin. Burns can result from improper use.
- Do not use if inner lining becomes damaged or torn.

SAFETY INSTRUCTIONS

- This product should not be used on infants or children.
- Not for use on a person with poor blood circulation or sensitivity to heat.
- Do not use if the inner lining is wet or damp. Product must be fully dry for safe use of the heating functions.
- Do not touch heating elements with bare skin. Burns can result from improper use.
- Do not use if inner lining becomes damaged or torn.

INSTRUCTIONS FOR USE

- Connect your battery pack with the USB cable located at the inner pocket.
- When the jacket is connected successfully, the power button will light up.
- To turn on press and hold the power button for around 3 seconds.
- The jacket will now begin to heat through the panels.
- To change temperature level, press the power button again.
- Keep pressing the button to set the temperature level required.
- High temperature: RED light, Medium temperature: WHITE light, Low temperature: BLUE light.
- To turn off, press and hold the power button again (around 3 seconds).
- If the jacket turns off unexpectedly, ensure to check cable connections and the remaining charge in the battery pack.
- To charge a mobile device, simply connect through the second USB port.
- Please note that charging a mobile device will affect the length of usage.

WASHING INSTRUCTIONS

- This product should not be used on infants or children.
- Not for use on a person with poor blood circulation or sensitivity to heat.
- Do not use if the inner lining is wet or damp. Product must be fully dry for safe use of the heating functions.
- Do not touch heating elements with bare skin. Burns can result from improper use.
- Do not use if inner lining becomes damaged or torn.

SAFETY INSTRUCTIONS

- This product should not be used on infants or children.
- Not for use on a person with poor blood circulation or sensitivity to heat.
- Do not use if the inner lining is wet or damp. Product must be fully dry for safe use of the heating functions.
- Do not touch heating elements with bare skin. Burns can result from improper use.
- Do not use if inner lining becomes damaged or torn.

INSTRUCTIONS FOR USE

- Connect your battery pack with the USB cable located at the inner pocket.
- When the jacket is connected successfully, the power button will light up.
- To turn on press and hold the power button for around 3 seconds.
- The jacket will now begin to heat through the panels.
- To change temperature level, press the power button again.
- Keep pressing the button to set the temperature level required.
- High temperature: RED light, Medium temperature: WHITE light, Low temperature: BLUE light.
- To turn off, press and hold the power button again (around 3 seconds).
- If the jacket turns off unexpectedly, ensure to check cable connections and the remaining charge in the battery pack.
- To charge a mobile device, simply connect through the second USB port.
- Please note that charging a mobile device will affect the length of usage.

WASHING INSTRUCTIONS

- This product should not be used on infants or children.
- Not for use on a person with poor blood circulation or sensitivity to heat.
- Do not use if the inner lining is wet or damp. Product must be fully dry for safe use of the heating functions.
- Do not touch heating elements with bare skin. Burns can result from improper use.
- Do not use if inner lining becomes damaged or torn.

SAFETY INSTRUCTIONS

- This product should not be used on infants or children.
- Not for use on a person with poor blood circulation or sensitivity to heat.
- Do not use if the inner lining is wet or damp. Product must be fully dry for safe use of the heating functions.
- Do not touch heating elements with bare skin. Burns can result from improper use.
- Do not use if inner lining becomes damaged or torn.

INSTRUCTIONS FOR USE

- Connect your battery pack with the USB cable located at the inner pocket.
- When the jacket is connected successfully, the power button will light up.
- To turn on press and hold the power button for around 3 seconds.
- The jacket will now begin to heat through the panels.
- To change temperature level, press the power button again.
- Keep pressing the button to set the temperature level required.
- High temperature: RED light, Medium temperature: WHITE light, Low temperature: BLUE light.
- To turn off, press and hold the power button again (around 3 seconds).
- If the jacket turns off unexpectedly, ensure to check cable connections and the remaining charge in the battery pack.
- To charge a mobile device, simply connect through the second USB port.
- Please note that charging a mobile device will affect the length of usage.

WASHING INSTRUCTIONS

- This product should not be used on infants or children.
- Not for use on a person with poor blood circulation or sensitivity to heat.
- Do not use if the inner lining is wet or damp. Product must be fully dry for safe use of the heating functions.
- Do not touch heating elements with bare skin. Burns can result from improper use.
- Do not use if inner lining becomes damaged or torn.

SAFETY INSTRUCTIONS

- This product should not be used on infants or children.
- Not for use on a person with poor blood circulation or sensitivity to heat.
- Do not use if the inner lining is wet or damp. Product must be fully dry for safe use of the heating functions.
- Do not touch heating elements with bare skin. Burns can result from improper use.
- Do not use if inner lining becomes damaged or torn.

INSTRUCTIONS FOR USE

- Connect your battery pack with the USB cable located at the inner pocket.
- When the jacket is connected successfully, the power button will light up.
- To turn on press and hold the power button for around 3 seconds.
- The jacket will now begin to heat through the panels.
- To change temperature level, press the power button again.
- Keep pressing the button to set the temperature level required.
- High temperature: RED light, Medium temperature: WHITE light, Low temperature: BLUE light.
- To turn off, press and hold the power button again (around 3 seconds).
- If the jacket turns off unexpectedly, ensure to check cable connections and the remaining charge in the battery pack.
- To charge a mobile device, simply connect through the second USB port.
- Please note that charging a mobile device will affect the length of usage.

WASHING INSTRUCTIONS

- This product should not be used on infants or children.
- Not for use on a person with poor blood circulation or sensitivity to heat.
- Do not use if the inner lining is wet or damp. Product must be fully dry for safe use of the heating functions.
- Do not touch heating elements with bare skin. Burns can result from improper use.
- Do not use if inner lining becomes damaged or torn.

SAFETY INSTRUCTIONS

- This product should not be used on infants or children.
- Not for use on a person with poor blood circulation or sensitivity to heat.
- Do not use if the inner lining is wet or damp. Product must be fully dry for safe use of the heating functions.
- Do not touch heating elements with bare skin. Burns can result from improper use.
- Do not use if inner lining becomes damaged or torn.

INSTRUCTIONS FOR USE

- Connect your battery pack with the USB cable located at the inner pocket.
- When the jacket is connected successfully, the power button will light up.
- To turn on press and hold the power button for around 3 seconds.
- The jacket will now begin to heat through the panels.
- To change temperature level, press the power button again.
- Keep pressing the button to set the temperature level required.
- High temperature: RED light, Medium temperature: WHITE light, Low temperature: BLUE light.
- To turn off, press and hold the power button again (around 3 seconds).
- If the jacket turns off unexpectedly, ensure to check cable connections and the remaining charge in the battery pack.
- To charge a mobile device, simply connect through the second USB port.
- Please note that charging a mobile device will affect the length of usage.

WASHING INSTRUCTIONS

- This product should not be used on infants or children.
- Not for use on a person with poor blood circulation or sensitivity to heat.
- Do not use if the inner lining is wet or damp. Product must be fully dry for safe use of the heating functions.
- Do not touch heating elements with bare skin. Burns can result from improper use.
- Do not use if inner lining becomes damaged or torn.

SAFETY INSTRUCTIONS

- This product should not be used on infants or children.
- Not for use on a person with poor blood circulation or sensitivity to heat.
- Do not use if the inner lining is wet or damp. Product must be fully dry for safe use of the heating functions.
- Do not touch heating elements with bare skin. Burns can result from improper use.
- Do not use if inner lining becomes damaged or torn.

INSTRUCTIONS FOR USE

- Connect your battery pack with the USB cable located at the inner pocket.
- When the jacket is connected successfully, the power button will light up.
- To turn on press and hold the power button for around 3 seconds.
- The jacket will now begin to heat through the panels.
- To change temperature level, press the power button again.
- Keep pressing the button to set the temperature level required.
- High temperature: RED light, Medium temperature: WHITE light, Low temperature: BLUE light.
- To turn off, press and hold the power button again (around 3 seconds).
- If the jacket turns off unexpectedly, ensure to check cable connections and the remaining charge in the battery pack.
- To charge a mobile device, simply connect through the second USB port.
- Please note that charging a mobile device will affect the length of usage.

WASHING INSTRUCTIONS

- This product should not be used on infants or children.
- Not for use on a person with poor blood circulation or sensitivity to heat.
- Do not use if the inner lining is wet or damp. Product must be fully dry for safe use of the heating functions.
- Do not touch heating elements with bare skin. Burns can result from improper use.
- Do not use if inner lining becomes damaged or torn.

SAFETY INSTRUCTIONS

- This product should not be used on infants or children.
- Not for use on a person with poor blood circulation or sensitivity to heat.
- Do not use if the inner lining is wet or damp. Product must be fully dry for safe use of the heating functions.
- Do not touch heating elements with bare skin. Burns can result from improper use.
- Do not use if inner lining becomes damaged or torn.

INSTRUCTIONS FOR USE

- Connect your battery pack with the USB cable located at the inner pocket.
- When the jacket is connected successfully, the power button will light up.
- To turn on press and hold the power button for around 3 seconds.
- The jacket will now begin to heat through the panels.
- To change temperature level, press the power button again.
- Keep pressing the button to set the temperature level required.
- High temperature: RED light, Medium temperature: WHITE light, Low temperature: BLUE light.
- To turn off, press and hold the power button again (around 3 seconds).
- If the jacket turns off unexpectedly, ensure to check cable connections and the remaining charge in the battery pack.
- To charge a mobile device, simply connect through the second USB port.
- Please note that charging a mobile device will affect the length of usage.

WASHING INSTRUCTIONS

- This product should not be used on infants or children.
- Not for use on a person with poor blood circulation or sensitivity to heat.
- Do not use if the inner lining is wet or damp. Product must be fully dry for safe use of the heating functions.
- Do not touch heating elements with bare skin. Burns can result from improper use.
- Do not use if inner lining becomes damaged or torn.

SAFETY INSTRUCTIONS

- This product should not be used on infants or children.
- Not for use on a person with poor blood circulation or sensitivity to heat.
- Do not use if the inner lining is wet or damp. Product must be fully dry for safe use of the heating functions.
- Do not touch heating elements with bare skin. Burns can result from improper use.
- Do not use if inner lining becomes damaged or torn.

INSTRUCTIONS FOR USE

- Connect your battery pack with the USB cable located at the inner pocket.
- When the jacket is connected successfully, the power button will light up.
- To turn on press and hold the power button for around 3 seconds.
- The jacket will now begin to heat through the panels.
- To change temperature level, press the power button again.
- Keep pressing the button to set the temperature level required.
- High temperature: RED light, Medium temperature: WHITE light, Low temperature: BLUE light.
- To turn off, press and hold the power button again (around 3 seconds).
- If the jacket turns off unexpectedly, ensure to check cable connections and the remaining charge in the battery pack.
- To charge a mobile device, simply connect through the second USB port.
- Please note that charging a mobile device will affect the length of usage.

WASHING INSTRUCTIONS

- This product should not be used on infants or children.
- Not for use on a person with poor blood circulation or sensitivity to heat.
- Do not use if the inner lining is wet or damp. Product must be fully dry for safe use of the heating functions.
- Do not touch heating elements with bare skin. Burns can result from improper use.
- Do not use if inner lining becomes damaged or torn.

SAFETY INSTRUCTIONS

- This product should not be used on infants or children.
- Not for use on a person with poor blood circulation or sensitivity to heat.
- Do not use if the inner lining is wet or damp. Product must be fully dry for safe use of the heating functions.
- Do not touch heating elements with bare skin. Burns can result from improper use.
- Do not use if inner lining becomes damaged or torn.

INSTRUCTIONS FOR USE

- Connect your battery pack with the USB cable located at the inner pocket.
- When the jacket is connected successfully, the power button will light up.
- To turn on press and hold the power button for around 3 seconds.
- The jacket will now begin to heat through the panels.
- To change temperature level, press the power button again.
- Keep pressing the button to set the temperature level required.
- High temperature: RED light, Medium temperature: WHITE light, Low temperature: BLUE light.
- To turn off, press and hold the power button again (around 3 seconds).
- If the jacket turns off unexpectedly, ensure to check cable connections and the remaining charge in the battery pack.
- To charge a mobile device, simply connect through the second USB port.
- Please note that charging a mobile device will affect the length of usage.

WASHING INSTRUCTIONS

- This product should not be used on infants or children.
- Not for use on a person with poor blood circulation or sensitivity to heat.
- Do not use if the inner lining is wet or damp. Product must be fully dry for safe use of the heating functions.
- Do not touch heating elements with bare skin. Burns can result from improper use.
- Do not use if inner lining becomes damaged or torn.

SAFETY INSTRUCTIONS

- This product should not be used on infants or children.
- Not for use on a person with poor blood circulation or sensitivity to heat.
- Do not use if the inner lining is wet or damp. Product must be fully dry for safe use of the heating functions.
- Do not touch heating elements with bare skin. Burns can result from improper use.
- Do not use if inner lining becomes damaged or torn.

INSTRUCTIONS FOR USE

- Connect your battery pack with the USB cable located at the inner pocket.
- When the jacket is connected successfully, the power button will light up.
- To turn on press and hold the power button for around 3 seconds.
- The jacket will now begin to heat through the panels.
- To change temperature level, press the power button again.
- Keep pressing the button to set the temperature level required.
- High temperature: RED light, Medium temperature: WHITE light, Low temperature: BLUE light.
- To turn off, press and hold the power button again (around 3 seconds).
- If the jacket turns off unexpectedly, ensure to check cable connections and the remaining charge in the battery pack.
- To charge a mobile device, simply connect through the second USB port.
- Please note that charging a mobile device will affect the length of usage.

WASHING INSTRUCTIONS

- This product should not be used on infants or children.
- Not for use on a person with poor blood circulation or sensitivity to heat.
- Do not use if the inner lining is wet or damp. Product must be fully dry for safe use of the heating functions.
- Do not touch heating elements with bare skin. Burns can result from improper use.
- Do not use if inner lining becomes damaged or torn.

SAFETY INSTRUCTIONS

- This product should not be used on infants or children.
- Not for use on a person with poor blood circulation or sensitivity to heat.
- Do not use if the inner lining is wet or damp. Product must be fully dry for safe use of the heating functions.
- Do not touch heating elements with bare skin. Burns